


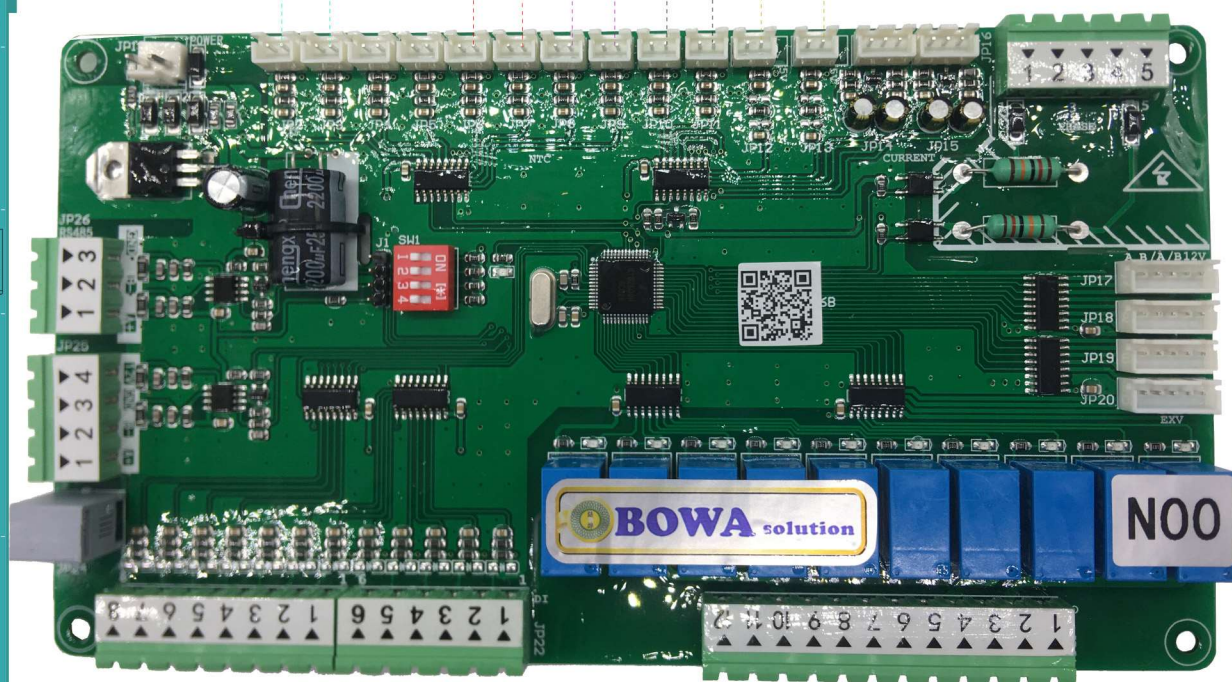


NTC sensor installation Guide

温感安装导图

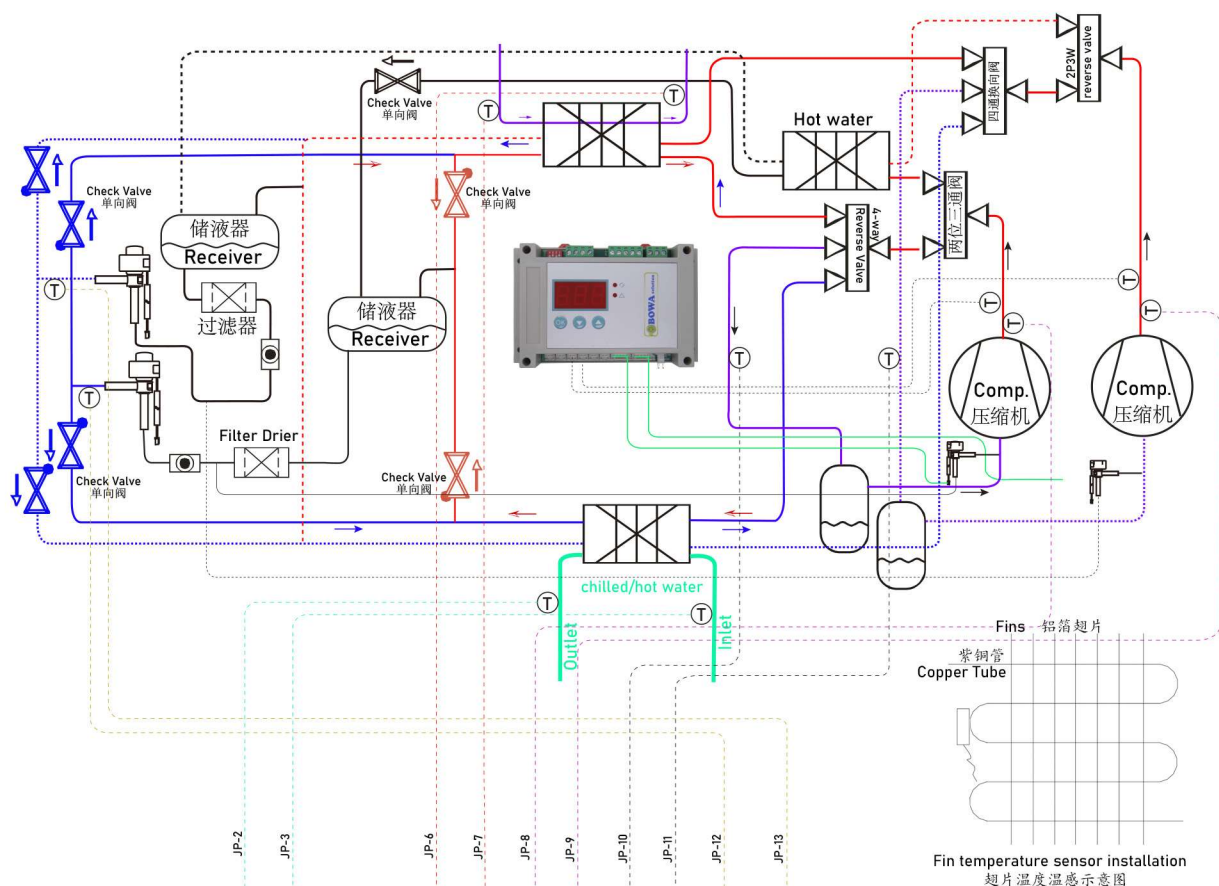


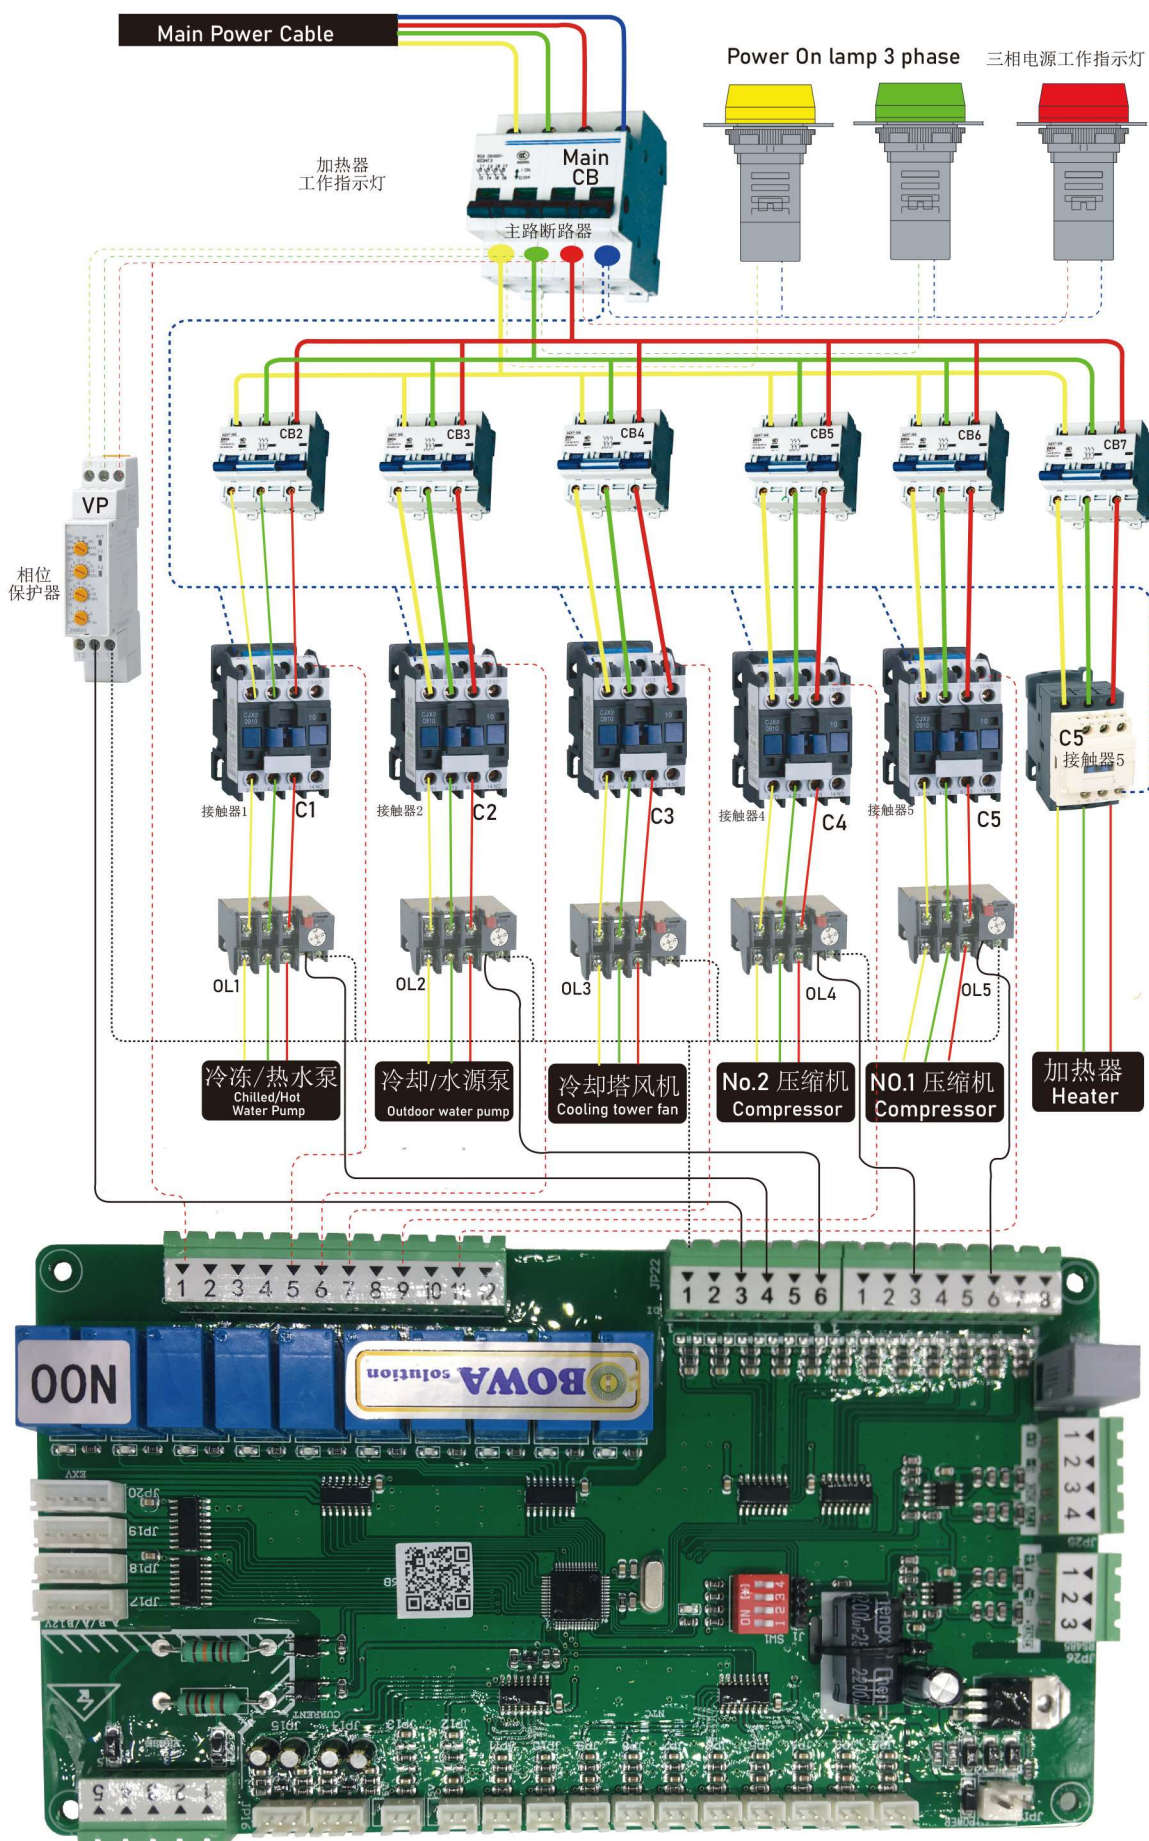

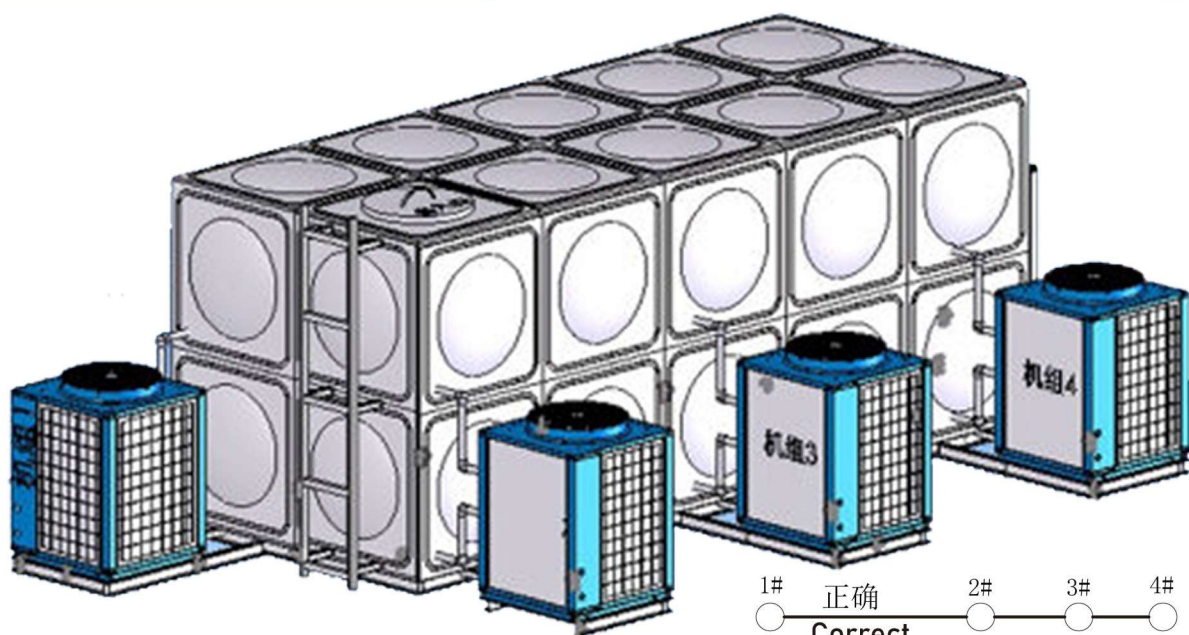


Network wiring diagram

组网接线图

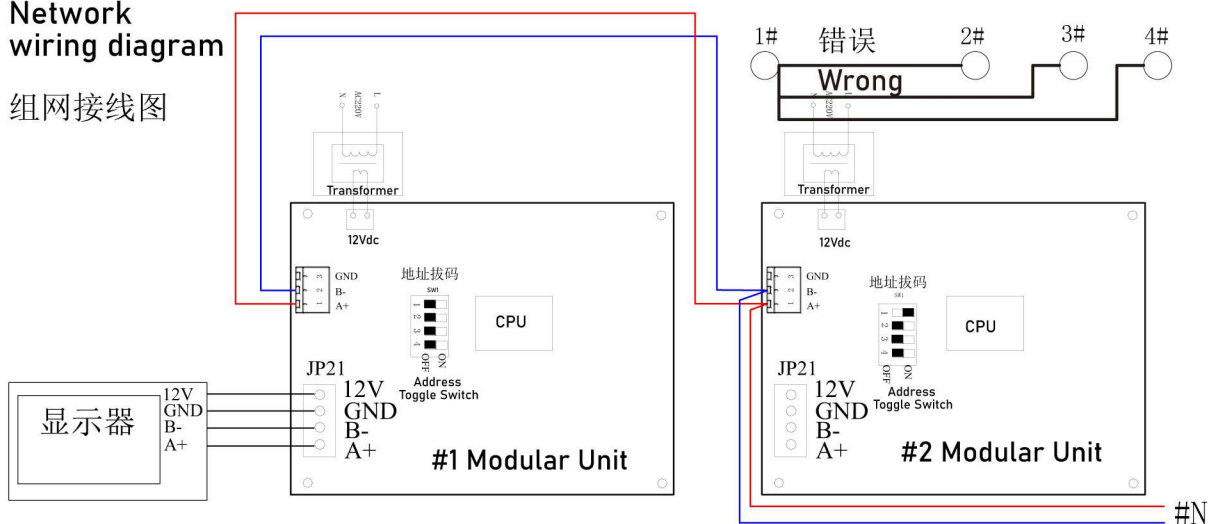

1	1 2 3 4	ON OFF	5	1 2 3 4	ON OFF	9	1 2 3 4	ON OFF	13	1 2 3 4	ON OFF
2	1 2 3 4	ON OFF	6	1 2 3 4	ON OFF	10	1 2 3 4	ON OFF	14	1 2 3 4	ON OFF
3	1 2 3 4	ON OFF	7	1 2 3 4	ON OFF	11	1 2 3 4	ON OFF	15	1 2 3 4	ON OFF
4	1 2 3 4	ON OFF	8	1 2 3 4	ON OFF	12	1 2 3 4	ON OFF	16	1 2 3 4	ON OFF

Capacity regulating logic 能量调节逻辑

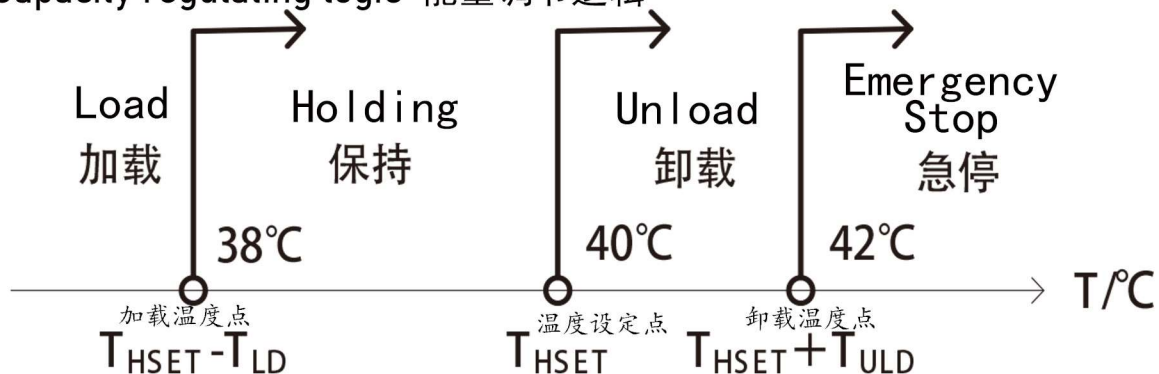

T_{HSET} = Temperature setting 温度设定值;

T_{ULD} = Temperature hysteresis to unload = Default 2°C, adjustable 0.2~9.9°C
卸载温度差值=默认2°C, 0.2~9.9°C之间可调;

T_{LD} = Temperature hysteresis to load = Default 2°C, adjustable 0~9.9°C
加载温度差值=默认2°C, 0~9.9°C之间可调

* Regulating circle = 30seconds, adjustable 10~240s
调节周期 = 30秒, 10~240s之间可调

