

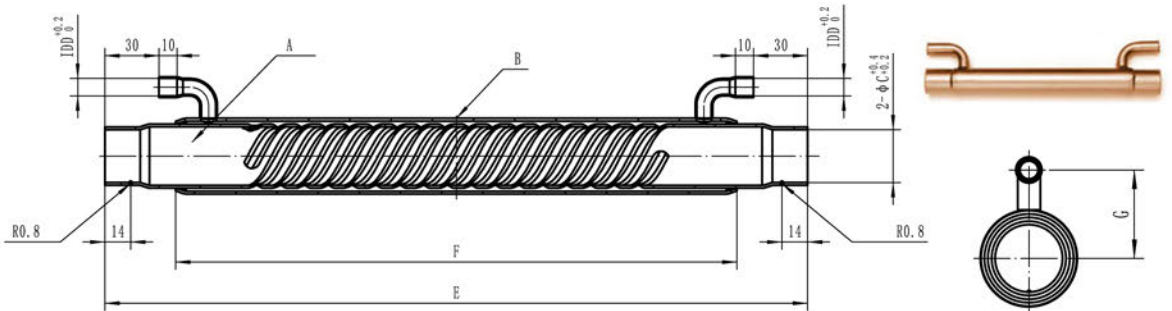
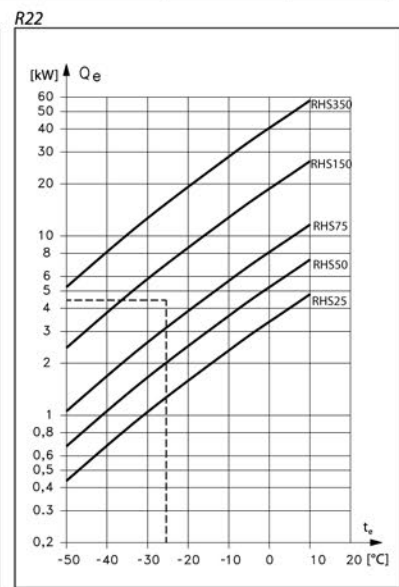


- \* The heat exchanger is used primarily for heat transfer between the liquid and suction lines of the refrigeration plant.
- \* The purpose is to utilize the cooling effect which without a heat exchanger is otherwise lost to the ambient air via uninsulated suction lines.
- \* In the heat exchanger, this effect is used to subcool the refrigerant liquid.

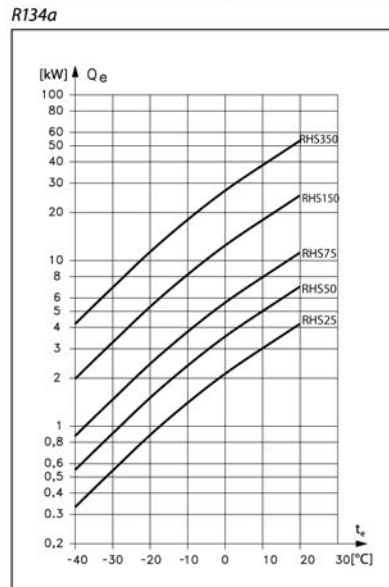

Model		Connection Size	A	E	B	F	C	D	G
		Inch	mm	mm	mm	mm	mm	mm	mm
RHS-25	1/2HP	1/2" * 1/4"	Ø19.05*1.2	230	Ø25.4*1.2	180	Ø12.7	Ø6.35	30.00
RHS-50	1HP	5/8" * 3/8"	Ø22.2*1.2	260	Ø28.6*1.4	210	Ø15.88	Ø9.52	31.70
RHS-75	1-1/2HP	7/8" * 3/8"	Ø28.6*1.4	330	Ø34.9*1.4	270	Ø22.2	Ø9.52	34.80
RHS-100	2HP	1-1/8" * 3/8"	Ø34.9*1.4	380	Ø41.3*1.4	310	Ø28.6	Ø9.52	38.00
RHS-150	3HP	1-1/8" * 1/2"	Ø34.9*1.4	380	Ø41.3*1.4	310	Ø28.6	Ø12.7	48.00
RHS-250	5HP	1-3/8" * 1/2"	Ø41.3*1.4	380	Ø47.7*1.4	310	Ø34.9	Ø12.7	51.20
RHS-350	7HP	1-5/8" * 5/8"	Ø47.7*1.4	435	Ø54.1*1.4	340	Ø41.3	Ø15.88	63.00
RHS-500	10HP	2-1/8" * 7/8"	Ø60.4*2.0	457	Ø66.8*2.0	357	Ø54	Ø22.23	83.00

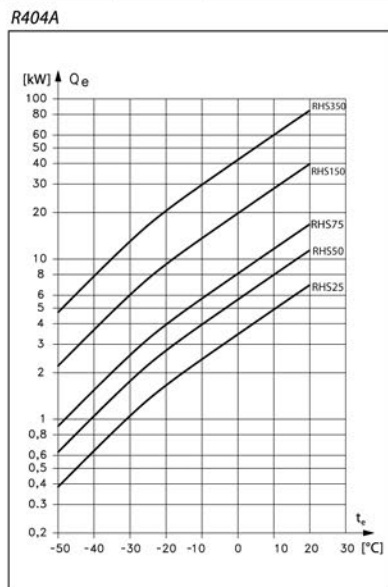

## Installation Guide

